

1104BT Catheter

To help prevent possible patient injury resulting from incorrect ICP measurements, follow the steps below before catheter implantation. Always make sure to adjust the catheter's ICP value to zero before implantation while the catheter is in the air. Never attempt to change the zero adjustment while the catheter is inside the patient.

Monitor Setup

1. Connect the black fiber optic catheter cable (CAMCABL) to the ports on the Camino monitor
 - Attach the cable's ICP connector (P) into the port labeled ICP by aligning the red dot on the cable connector with the red triangle on the monitor's port and push firmly
 - Attach the cable's temperature connector (T) into the port labeled ICT
2. Identify the appropriate catheter by the label on the outside of the box (see picture of label on right)
3. Using sterile technique, remove the inner catheter tray from its sterile package and place in sterile field
4. Using proper technique to maintain sterility, connect the preamp connector at the end of the CAMCABL to the black transducer connector at the end of the catheter
5. Check the monitor display to determine the ICP reading
 - If it does not read zero, press the SCALE button on the MAIN tab to select a waveform range of -10 to 20mmHg. Use the zero adjustment tool from the catheter kit to turn the screw on the bottom side of the transducer connector (Figure 1) until the monitor display reads zero by aligning the waveform line to the zero mark on the graph.
6. Prior to implanting the catheter into the patient, disconnect the preamp connector at the end of the CAMCABL from the black transducer connector at the end of the catheter
 - Ensure the black transducer connector does not breach sterility



Camino Monitor



ICP & ICT Ports



CAMCABL

1104BT Catheter and Label


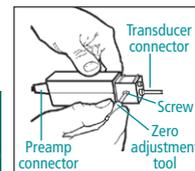


Figure 1

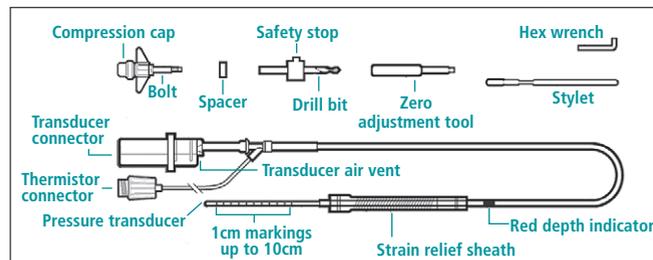


1104BT Catheter Kit

1104BT Catheter

Area of insertion

The standard right and left prefrontal areas are the primary areas of insertion

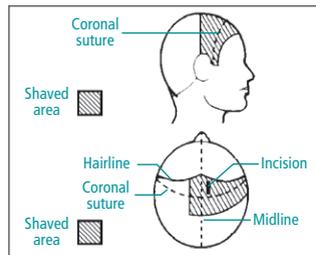

The safety stop on the drill bit can be positioned as desired by loosening the set screw with the hex wrench, sliding the safety stop to the desired position, and tightening the set screw.


Catheter Placement

1. Prepare sterile field: clip hair, prep skin, drape area, open skin
2. Using drill bit from Camino kit, create burr hole and rinse with saline
3. Open the dura using an 18G spinal needle to make a cruciate incision
4. Screw the bolt into the skull clockwise
5. Ensure that there is a clear path through the skull using the stylet


Seating depth of the bolt will be at the discretion of the surgeon depending on the thickness of the skull

6. Prior to catheter insertion, ensure it has been properly zeroed
7. Place fingers between the 6 and 7cm mark and insert catheter through bolt passage until the fingers touch the top of the bolt
8. Pull back slightly on catheter and tighten compression cap to secure catheter in place
9. Reconnect the catheter to the CAMCABL and verify waveform on Camino monitor and/or bedside monitor
10. Attach the temperature thermistor from the catheter to the temperature connector on the CAMCABL
11. While holding catheter, slide the strain relief sheath down towards the bolt and secure it to the compression cap


If red depth indicator is visible above strain relief, catheter tip position should be checked to ensure desired depth is achieved

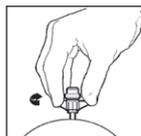


Place bolt

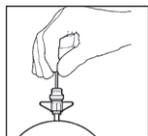


Clear path with stylet

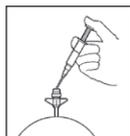


Irrigate

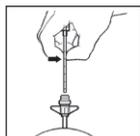


Place finger between 6 & 7cm mark and insert until finger touches bolt

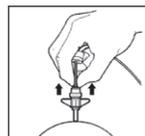

Pull back on catheter slightly

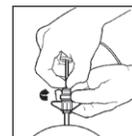

Tighten compression cap

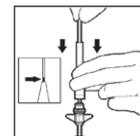

Hold catheter and pull down strain relief tube

natus.
neuro

Natus Neuro
3150 Pleasant View Road
Middleton, WI 53562 USA
Tel: 1-800-356-0007
1-608-829-8500
Fax: 1-608-829-8709
www.natus.com

The Camino ICP Monitor is indicated for use by qualified neurosurgeons or neurointensivists for measurement of intracranial pressure and temperature. The use of the Camino Intracranial Pressure and Temperature Monitoring Kit.